 


8 in 1 Pet Grooming Kit Instruction

Model: M2

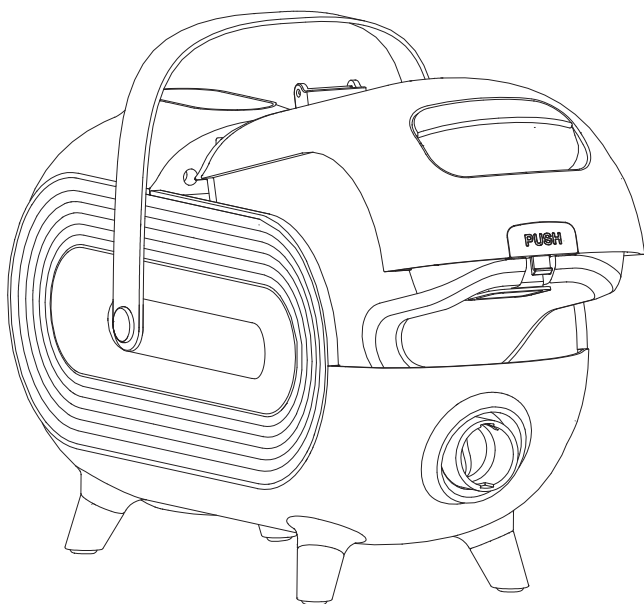

Thank you for choosing us
Before using, please read all instruction thoroughly.

✉ Service Email: cs-omc@outlook.com

Content

Chapter 1. -----	1-2
Important Safety Instruction	
Chapter 2. -----	3
Quick Setup Guide	
Chapter 3. -----	3-5
Accessories Part 1: Electric Clipper	
Chapter 4. -----	5-6
Accessories Part 2: Combo Accessories Kit	
Chapter 5. -----	6-7
Accessories Part 3: Nozzle	
Chapter 6. -----	7-9
Care & Maintenance	
Chapter 7. -----	10
Trouble Shooting	
Chapter 8. -----	10
Warranty	

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following: **READ ALL INSTRUCTIONS BEFORE USING (THIS APPLIANCE)**

WARNING - To reduce the risk of fire, electric shock, or injury:

- 1) Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing.
- 2) Do not use outdoors or on wet surfaces.
- 3) Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- 4) Use only as described in this manual. Use only manufacturer's recommended attachments.
- 5) Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- 6) Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- 7) Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- 8) Do not handle plug or appliance with wet hands.
- 9) Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- 10) Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- 11) Turn off all controls before unplugging.
- 12) Use extra care when cleaning on stairs.
- 13) Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- 14) Always turn off this appliance before connecting or disconnecting motorized nozzle.
- 15) Unplug before connecting Clipper and other accessories.
- 16) Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- 17) Do not use without dust bag and/or filters in place.
- 18) This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 19) Children should be supervised to ensure that they do not play with the appliance. The clipper attachment must only be supplied at safety extra low voltage corresponding to the marking on the appliance.
- 20) If the SUPPLY CORD is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.
- 21) The instructions for ANIMAL CLIPPERS shall state that the appliance is intended for trimming purposes only.

-
- 22) The ANIMAL CLIPPERS are intended for household use only.
 - 23) WARNING: Cutting blades may become hot after prolonged use.
 - 24) Use only with a USB Power Source on a certified product, such as on a computer, receptacle, lamp, class 2 power supply or automotive adaptor.
 - 25) Do not reach for an appliance that has fallen into water.
 - 26) Do not use while bathing or in a shower.
 - 27) Do not place or store appliance where it is able to fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
 - 28) Except when charging, always unplug this appliance from the electrical outlet immediately after using.
 - 29) Unplug this appliance before cleaning.
 - 30) An appliance shall never be left unattended when plugged in.
 - 31) This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
 - 32) Use this appliance only for its intended use as describe in this manual. Do not use attachments not specified by the manufacturer.
 - 33) Never operate this appliance when it has a damaged cord or plug, when it is not working properly, after it has been dropped or damaged, or after it has been dropped into water. Return the appliance to a service center for examination and repair.
 - 34) Keep the cord away from heated surfaces.
 - 35) Keep the air openings free of lint, hair, and similar objects.
 - 36) Never drop or insert any object into any opening.
 - 37) Do not use outdoors or operate while aerosol (spray) products are being used.
 - 38) Do not use this appliance with a damaged or broken comb, as it has the potential to result in facial injury.
 - 39) Always attach plug to appliance first, then to outlet. To disconnect, turn all controls to off position (e.g. "0") then remove plug from outlet.
 - 40) Do not charge, place or leave the appliance where it is expected to be Subject to damage by an animal, or Exposed to weather.
 - 41) The battery must be removed from the clipper before it is scrapped.
 - 42) The appliance must be disconnected from the supply mains when removing the battery.
 - 43) The battery is to be disposed of safely.

SAVE THESE INSTRUCTIONS

 
 
To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other).

This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way

Quick Setup Guide



Step 1. Disassemble the dust cup and remove all of the accessories.

Disassemble Dust Cup

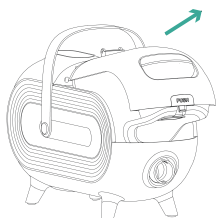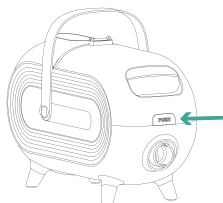


Press the PUSH button and then lift the dust cup in the arrow's direction.

  Assemble Dust Cup

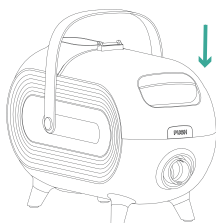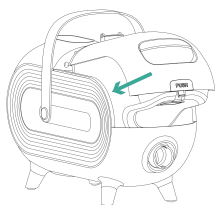


Insert the dust cup in the direction of the arrow. Make sure it's well fixed.

 Step 2: Connect one end of the hose to the vacuum.

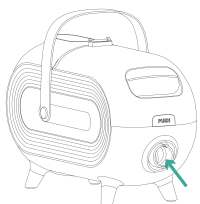


Insert & rotate clockwise

 

Step 3: Connect the other end of the hose to the accessories.

 Accessories Part 1: Electric clipper

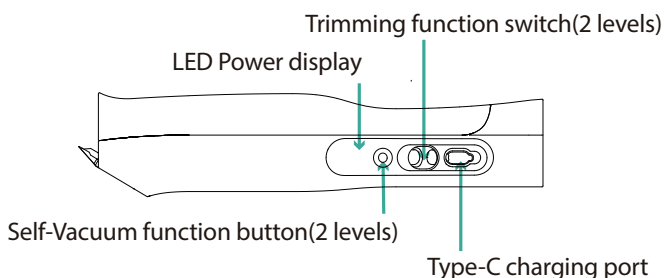

Electric Clipper Operation Instructions:

I. Trimming function:

Trimming function: When the Trimming function switch is OFF, shift the switch to the 1st or 2nd gear to turn it on.

Self-Vacuum function: Press the Self-vacuum function button once to start the 1st gear (1 light on). Press the button 2nd time to start the 2nd gear with stronger suction (2 lights on). Press the button the 3rd time to turn off the self-vacuum function (light off).

(Note: Self-vacuum function could not work when the Trimming function is off.)

II. Power Display:

1. When the clipper is charged, it could not work. The LED power display will flash from 0 to 99, and it will stay lit with "--" when the battery is fully charged.
2. When the battery is lower than 20%, the LED power display will flash.
3. When the power is run out, the LED power display "00", clipper will stop working.

III. Trouble shooting:


1. The LED power display "E0", and the clipper does not work.
---Please turn off the clipper
(Push the Trimming function switch to OFF),and restart it.
2. Could not turn on the clipper.
---Battery runs out.Please charge it.
3. The LED power display "E1", and the clipper does not work .
---Restore the normal temperature, and turn off the clipper .
(Push the Trimming function switch to OFF),and restart it.

Specifications

Electric Clipper:

Power	5W
Voltage	DC5.0V
Charge time	≤4h
Usage time	90mins
Battery	Li-ion 18650 1800mAh 3.7V

 1.1 According to different needs of hair style to choose guard comb. (optional use)

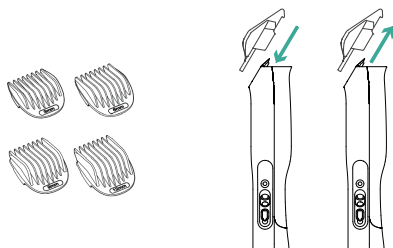


1.2 Choose Clipper Mode

• Strong Suction Mode

(Need to connect the clipper to the vacuum machine.)

 Install strong suction upper cover to the clipper, and switch the trimming function button only. Turn on the vacuum machine for suction.

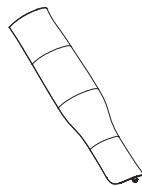


• Self-Vacuuming Mode



(only for trimming a small amount of hair.
No connection to the vacuum cleaner is required.)

Install the clipper's self-suction upper cover. Press the self-vacuum button and the trimming function button to activate the clipper's self-suction.

 Use a small blade for trimming on special areas like the paws or ears.

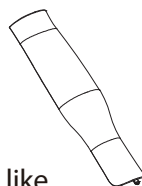


  Accessories Part 2: Combo Accessories Kit

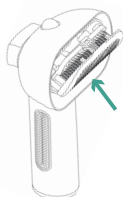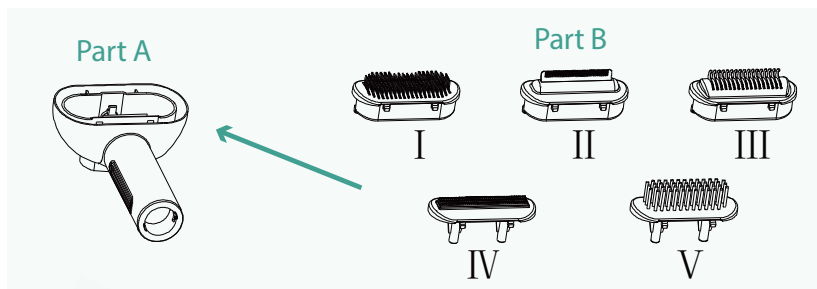

Install Part B to Part A:

 Make sure the fixed button of Part A is unlocked before installation. Align the bottom of Part B to the slots of Part A, press down Part B and you will hear a click if it has been well fixed.

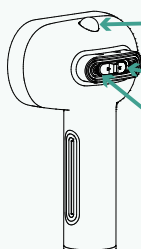

• Replacement Button

(Press the button to remove Part B)

• Fixed Button

 
(Slide to left: fix the brush
Slide to right: unlock the brush)

• Push Button

(Press to push out the brush)


I Slicker Brush

Dander, filth, tangled hair, and loose hair from your adorable pets are all easily removed.

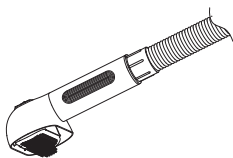


II De-shedding Brush

 Quickly removes loose hair.

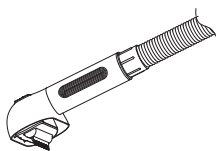


III De-matting Brush

 Gently eliminates tangles, knots, dander, and trapped dirt.

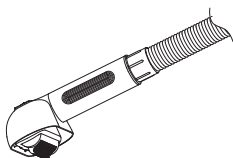

IV Silicone Brush

 
Effectively removes pet hair from your clothes, sofa, and bed...

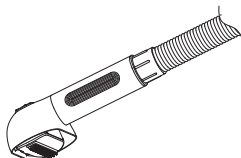

Tips: Be careful with the blade part.


V Cleaning Brush

 Clean hair from clothes or clean the paws of your pet after walking.

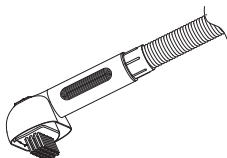

Accessories Part 3: Nozzle

 Easily cleans dirt and pet hair from sofa, carpet, keyboard, also hair clipper.



Step 4: Plug in the power and turn on the device.



 
Press the power button to start (default 2nd gear).

Press the " + " -" button to switch the gear.

Care & Maintenance

Clean Dust Cup

1. Pull the snap buckle outward to open and empty the dust cup.
2. Use paper or dry towel or clean water to clean dust cup.

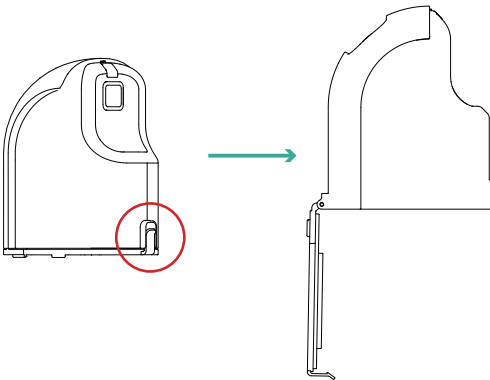


Warnings:



- * Be careful to take out or install the dust cup.
- * Dust cup must be dried before installation back into the machine. Wet dust cup may cause short circuits and machine malfunctions


Specification

Power	300 W
Hose Length	4.26 FT (After stretching)
Vacuum	≥9.0 KPa
Dust Cup Capacity	2 L
Power Cord Length	8.2 FT
Net Weight	6.39 LBS
Noise	≤ 80 dBA
Material	Metal / ABS / PC / PP
Unit Dimensions	13.5 x 5.9 x 8.3 INCH

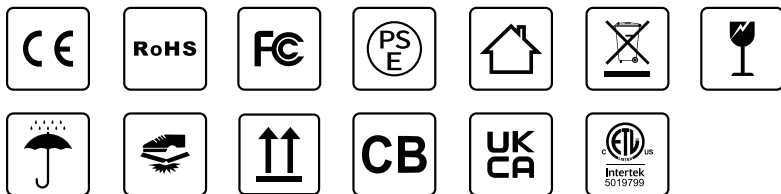 

Clean Hepa

 - Remove the dust cup and take out HEPA.
- Clean HEPA and sponge filter with water.
- Dry it in a ventilated place for at least 24 hours.
- Install HEPA back into the machine after it is completely dry.

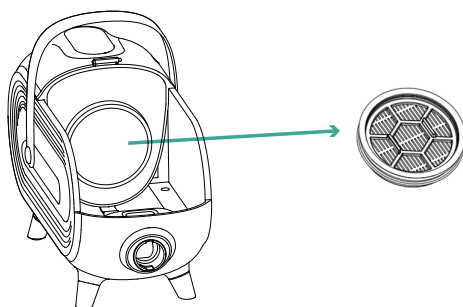

Notes:

- * HEPA should be cleaned at least every other month.
- * Do unplug the power before cleaning.
- * HEPA and dust cup must be dried before installation back into the machine.
- * Undried HEPA can cause short circuits and machine malfunctions.

 
Parts & Accessories



Vacuum machine x1



Accessories holder x1



Electric clipper x1



De-matting brush x1



 
Slicker brush x1



De-shedding brush x1



Silicone brush x1




Cleaning brush x1




Nozzle x1



 HEPA x1



Sponge filter x1

 

Self-suction upper cover x1



Strong suction upper cover x1



Guard comb
(3/6/9/12mm)



Big blade x1

 


Small blade x1


Clean Electric Clipper

Push outward to remove the blade.

Align the bottom of the blade with the slot and press inside to install the blade.

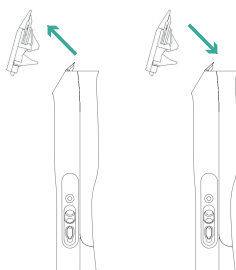

 2. Suction the debris from the blade and clipper. Drop some lubricant (not included) on the blade.

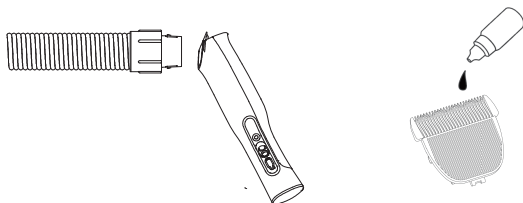

Trouble Shootings

Problem	Possible Cause	Solution
Vacuum on but Not suction hairs well	<input type="checkbox"/> Stuck Hose. <input type="checkbox"/> Stuck Filter <input type="checkbox"/> Hose/Attachment has not been well installed.	<input type="checkbox"/> Check the hose. <input type="checkbox"/> Clean the filter as instruction. <input type="checkbox"/> Install the hose or adapter properly.
Vacuum Stops Working Suddenly	<input type="checkbox"/> Overheating protection	<input type="checkbox"/> Please unplug and wait for the temperature drops.
Electric Clipper Produces Weird Noises	<input type="checkbox"/> Clippings stuck blade	<input type="checkbox"/> Clean the blade as instruction <input type="checkbox"/> Drop the appropriate amount of lubricating oil.

Warranty

- 12 months warranty from the purchase date. Limited free repair for the purchased product. Consumables and accessories are not subject to warranty.
- Within the warranty period, if the machine is damaged or malfunctions during general use, it will be repaired free of charge. If it cannot be repaired, a replacement will be provided.
- The following conditions are paid repairs even during the warranty period:
 - ① Damage caused by misuse or carelessness.
 - ② Damage in transit.
 - ③ Damage caused by pets (biting, scratching, etc.).
 - ④ Damage caused by fire, flood, earthquake, hurricane or other natural disasters.
 - ⑤ Damage during use other than general household use (long-term commercial use, etc.).
- This warranty does not cover any of the following conditions:
 - ① Product purchased from sales channels without authorization (secondary market, auctions, etc.).
 - ② Disassembles or repairs the product without permission.
 - ③ Consumables and accessories.
- Shipping costs will be borne or reimbursed by us when the product is covered by warranty service.
However, cost of packaging materials will not be covered.
- If it is not covered by the warranty, shipping costs and repair fees will be charged when returning.
- The warranty period of the replacement product is based on the original order's warranty.
- Repair or replacement is only valid in certain countries or areas.
- Please contact us for further guidance if any issues.
- Warranty terms may be updated without notice. We reserve the right to it.

All repairs and replacement services will be handled under the latest warranty terms.

End



Here's how we can contact:

Phone: +1 888-998-4762 or WhatsApp

Email: cs-omc@outlook.com

Contact us through the purchasing platform



WhatsApp: CS-OMC